


# How to Change Your Furnace Filter in 5 Easy Steps

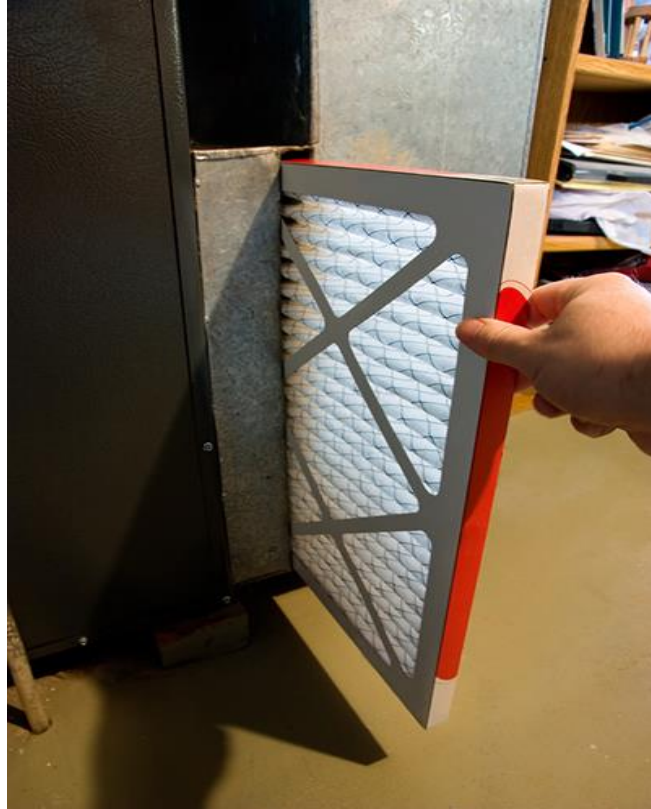

1. Turn Off Your Furnace
2. Find & Locate Your Furnace Filter
3. Remove the Existing (Old Filter)
4. Insert the New Filter
5. Turn On Your Furnace

\*Most filter compartments have the size of the filter on. When purchasing make sure you have the correct size filter. Some homes have reusable washable filters. In these cases when you remove the filter you would wash it and let it dry before putting in back in.